


MANEKI NEKO LUCKY CAT

LED Privacy Indicator Lock

PAGE 2

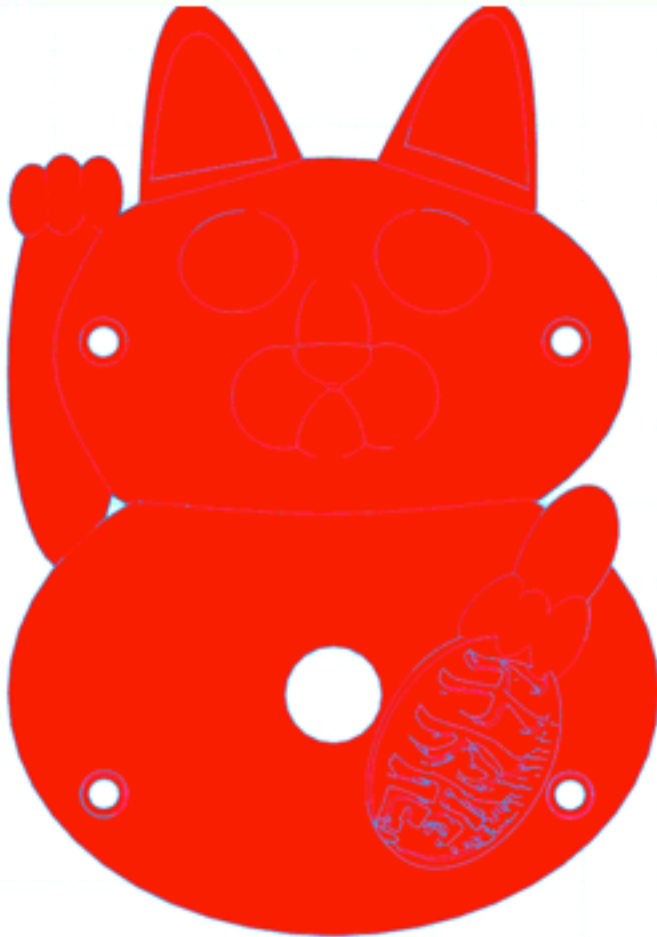

Place template onto outside of door and align the large hole though door with the large center hole in the Maneki Neko Lucky Cat.

Make sure the Maneki Neko Lucky Cat is aligned vertically and mark the 4 surrounding holes.

Use a 1/16" drill bit to start the four surrounding holes.

Insert Battery into holder and place indicator disc center cam onto the turnbar while unlocked.

Place Maneki Neko onto the turn-bar while LED is aiming down and off.

Mount with the included screws after inserting the 4 yellow anchors.

Test it by turning the inside lever to the locked position. Maneki Neko should glow red.

Now you can mount your Bolt Keeper and Strike.

Without closing the door, place the Bolt Keeper onto the bolt while the lever is in the locked position and move it close to door edge.

Mark the two holes and drill with 1/16th drill bit. Mount the Bolt Keeper with screws.

Move the lock to the open position and close the door. Lock it. Place the Door Strike over the end of the bolt and mark your screw holes.

Drill the two holes with a 1/16" drill bit.

Mount the strike with the included screws and you're good to go, arigato.

