



Maneki Neko Lucky Cat LED Privacy Indicator Lock Instructions PAGE 1

1. Place this template over inside of door and mark the four holes with a few turns of a 1/16" drill bit.
2. After starting the connecting hole with the 1/16" drill bit, open it up with a 1/2" drill bit until you're half-way through door.
3. Go around to the outside of door and open up the 1/16" Center Connecting Hole with your 1/2" drill until it meets the 1/2" hole you started on the inside of door.
4. Mount the Maneki Inside Section using the supplied #4 screws after drilling the three small holes with a 1/16" drill about 1" deep.
5. Put the supplied turn-bar through the outside Connecting Hole and slide it into the Maneki's Receiving Cam while in the Open or 'Vacant' position. See Page 2

LEFT-HAND DOOR EDGE

RIGHT-HAND DOOR EDGE

