 




MANEKI NEKO LUCKY CAT

LED Privacy Indicator Lock

PAGE 2

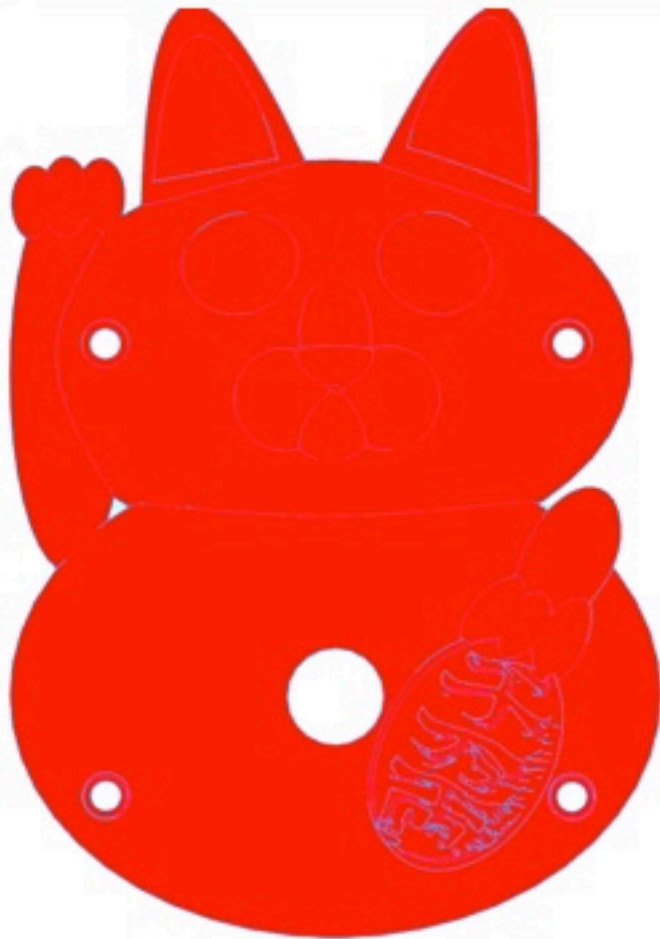

Place template onto outside of door and align the large hole though door with the large center hole in the Maneki Neko Lucky Cat.

Make sure the Maneki Neko Lucky Cat is aligned vertically and mark the 4 surrounding holes.

 
Use a 1/16" drill bit to start the four surrounding holes.

Insert Battery into holder and place indicator disc center cam onto the turnbar while unlocked.

Place Maneki Neko onto the turn-bar while LED is aiming down and off.

Mount with the included screws after inserting the 4 yellow anchors.

Test it by turning the inside lever to the locked position. Maneki Neko should glow red.

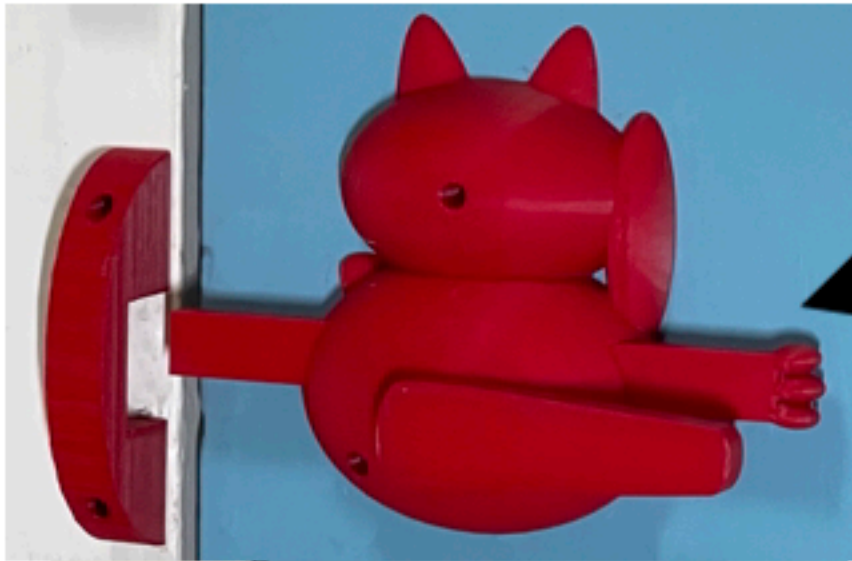

Move the lock to the open position and close the door. Lock it. Place the Door Strike over the end of the bolt and mark your screw holes.

Drill the two holes with a 1/16" drill bit.

Mount the strike with the included screws and you're good to go, arigato.