



RIGID CORE

WATERPROOF STONE COMPOSITE FLOORING

Please inspect each plank and approve all products before installation. Claims will not be accepted if the product is installed with visible defects.

Do not install over carpet or soft padded flooring.

TOOL REQUIRED: Utility knife, tape measure, square angle, rubber mallet, 3/8" spacers, tapping block.

INSTALLATION:

1. Inspect all planks for defect and damage. Do not install damaged planks. Use them for cuts. During installation, if debris gets into the grooves, clean and remove.
2. Planks are laid left to right. Start at the left wall of the room and work towards the right side. The tongue side of the plank should face the starting wall.
3. A 3/8" spacers along the wall and any obstruction should be used.
4. As you work right, drop and lock the short sides of each plank, using a rubber mallet. Please review the I4F installation video online or by scanning the QR code below.
5. The last plank on the right will need to be cut. Score the plank with a sharp utility knife and square angle. Then snap it. You can also use a saw to make the cut. The remaining piece will be your starter piece for the next row. But make sure you have the joints staggered at least 8". Joints from one row to the next should always be staggered a minimum of 8".
6. When you start a new row, angle the long side of the plank with the tongue going into the groove of the previous row. When placed, use a rubber mallet and beater block to make sure the long side has engaged properly. Install the second plank in the new row the same way. Then slide and drop over the short side to lock in place. Use a rubber mallet again to make sure the short side is engaged.
6. To dis-engage the planks, SLIDE the short side apart. Do not lift the planks in angle to dis-engage the short side. Please see video on the QR code.

AFTER INSTALLATION

1. Remove spacers and install transition molding. Do not fasten moldings to the planks. Transition moldings should be fastened to the subfloor and wall trim should be fastened to the wall.
2. Use proper floor protectors / coasters under the legs of all furniture.
3. Do not use any polishers, waxes or harsh chemicals for cleaning.
4. Most flooring and furniture will be affected by prolonged periods of sunlight. If possible, use drapes on windows to reduce exposure.

For warranty details, please contact your distributor.


How to engage

3L TripleLock & Click4U

Using your hands



SCAN
TO
WATCH

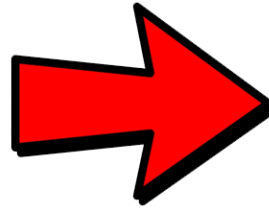

- 1** Start by engaging the plank on the long side (angle-system)



- 2** Slide the plank until it reaches the short side of the next plank



- 3** Let the plank drop gently



- 4** Press with your thumb on both ends of the short side



- 5**



- 6**

