


Beehive Handle Bathroom Privacy Indicator Door Lock Mounting Instructions

1. Place inside section template no more than 1/8" from door edge, using pencil to mark the five drill holes.

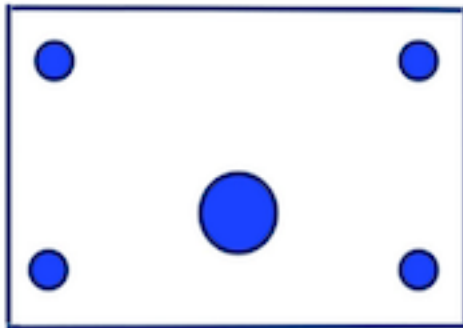


Inside Section Template



2. Drill small holes for #6 size screw 1" deep.

3. Drill large hole 7/16" diameter and through door.

Outside Section Template

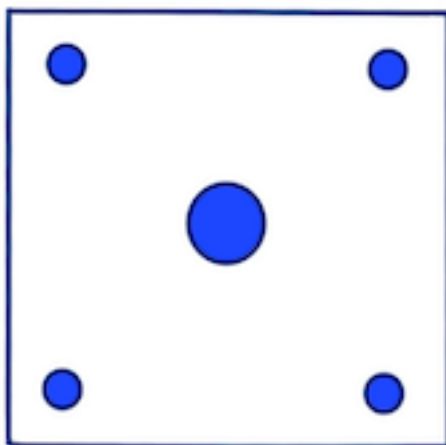

4. Position outside section template over 7/16" hole and use pencil to mark the four smaller holes.

5. Drill small holes for #6 size screw 1" deep.

6. Mount both lock sections and position universal edge strike on door frame so bolt from inside section fits into it when locked.

7. Mark two holes on universal edge strike onto frame with pencil and drill two holes for #6 size screw 1" deep. Mount door strike.

8. Enjoy your Beehive Handle Bathroom Privacy Indicator Door Lock.



For assistance call us at:
(417) 686-0811