



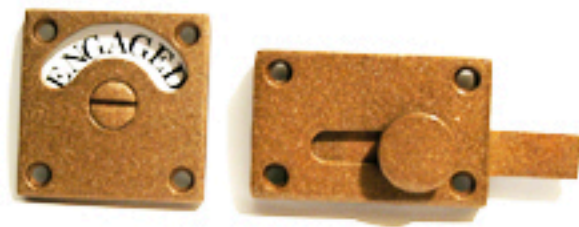

## Model D-100 Privacy Indicator Door Lock Mounting Instructions



1. Place Inside Section Template up to door edge and mark center of holes with screwdriver tip. For opposite swinging doors invert template.
2. Drill four small holes for #6 screw 1" deep and drill large hole 7/16" diameter through door.
3. Mount inside section with screws and insert turn-bar through 7/16" hole and into Inside Section's square cam hole.

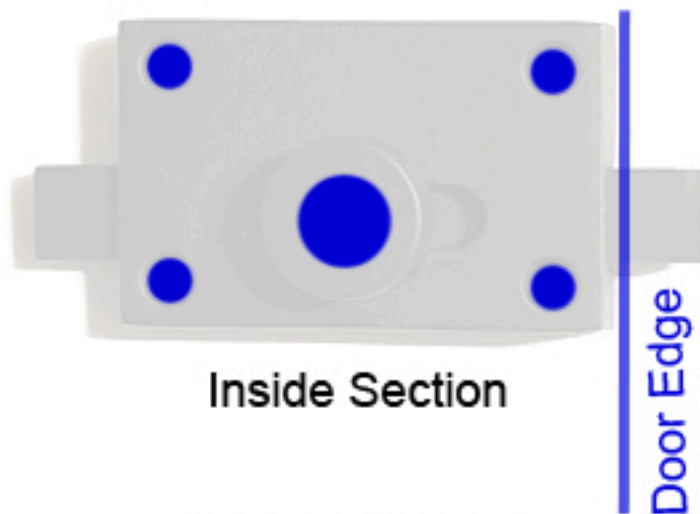

Inside Section

### Universal Edge Strike



Use when door and frame are not flush.

### Outside Section



4. Place Outside Section with Message Disc on cam, fitting onto turn-bar. Level and mark four small screw holes, drilling 1" deep. Mount with #6 screws.



### Surface-mounting Door Strike.

Use when door and frame are flush.

5. Mount appropriate included door strike. Enjoy.