


**After prepping the door with the P-100 or P-150 drill template, simply drill two holes on either side of the center through-hole for the outside face-plate section.**

**If you wish to flush-mount the face-plate see our handy cut-out guide on the P-100 or P-150 page at [pridebarco.com](http://pridebarco.com)**

OUTSIDE OF DOOR EDGE

TEMPLATE FOR K-250 RIGHT & LEFT HAND  
1 3/4" STD DOOR AND 2 3/4" BACKSET

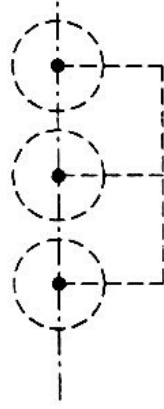


#3 DRILL (3) 7/16" HOLES  
#4 MORTISE LATCH PLATE

Flip template upside-down for Left-Hand Door installation.

OUTSIDE OF DOOR EDGE

TEMPLATE FOR K-250 RIGHT & LEFT HAND  
1 3/4" STD DOOR AND 2 3/8" BACKSET

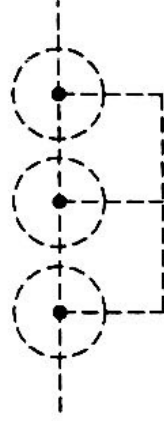

#3 DRILL (3) 7/16" HOLES  
#4 MORTISE LATCH PLATE