





Model D-100 L.E.D. Privacy Indicator Door Lock Mounting Instructions

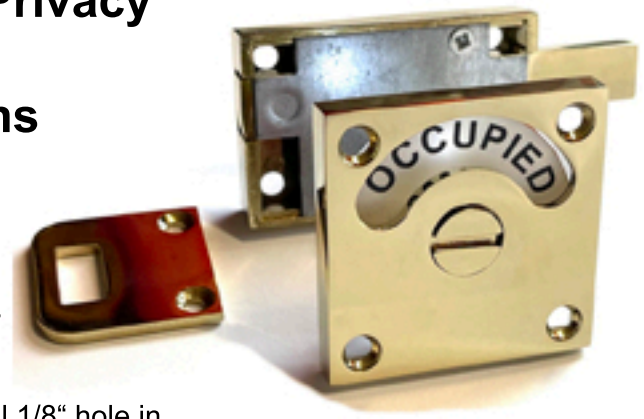

1. Place Inside Section Template up to door edge and mark center of holes with screw-driver tip. Note: For ADA Compliance mount no higher than 48" from floor. For frames with molding align door edge up to dotted lines and check to make sure Universal Edge Strike keeps the bolt when locked.
2. On Inside Section, drill four small holes for #6 screw 1" deep and drill 1/8" hole in center of larger hole through door.
3. **Skip this step if you're using the Red Acrylic Mounting Bracket.** Using the 1/8" hole drilled through door on Outside as a center-guide, use a 1-7/8" IRWIN Marples Wood Drilling Forstner Bit to drill a 1-7/8" hole 1/2" deep if solid wood door. If door is hollow or partially hollow trace Outside Section large hole and use jigsaw to cut a 1-7/8" hole 1/2" deep.
4. On Inside Section, open up the 1/8" center hole with 7/16" drill through door and mount Inside Section. Place Outside Section with L.E.D. Message Disc and turn-bar into hole, making sure turn-bar connects into Inside Section cam. Level and mark four small screw holes, drilling 1" deep.

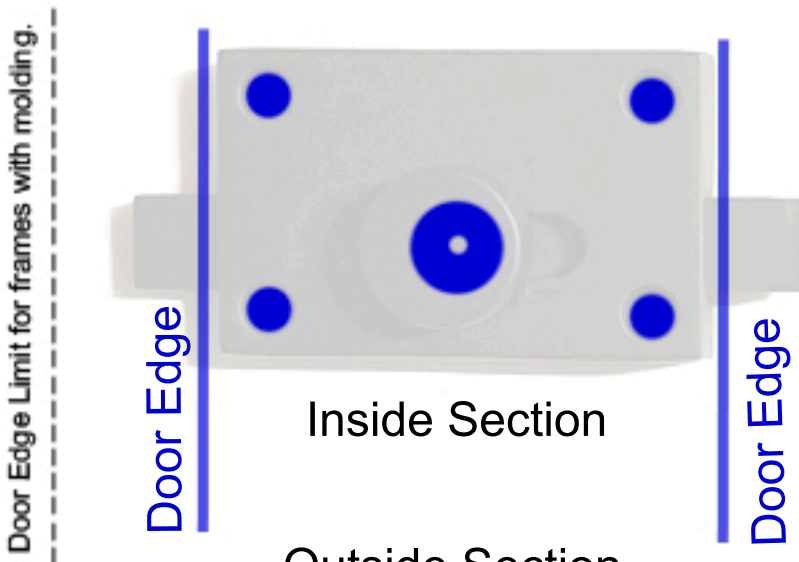


Inside Section

Universal Edge Strike



Use when door and frame are not flush.

Outside Section

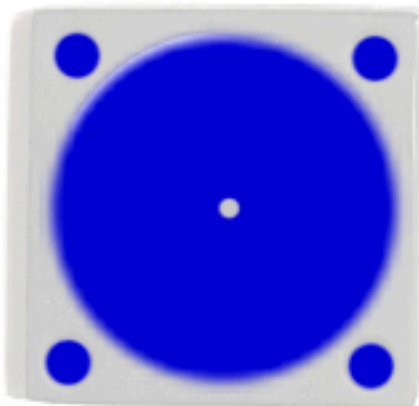

NOTE:
You don't need to drill the 1-7/8" diameter hole if you add the Red Acrylic Mounting Bracket. Use the small dot in center to drill a 3/8" hole through door.



Surface-mounting Door Strike.

Use when door and frame are flush.

5. Mount Outside Section, making sure Occupied is visible and lighted when locked.

6. Mount appropriate included door strike. Enjoy.