


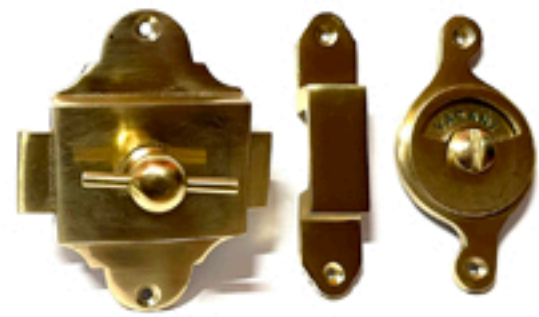


Antique Style Bathroom Privacy Indicator Lock Mounting Instructions



1. Place inside section template no more than 1/8" from door edge, using pencil to mark the three drill holes.

Inside Section

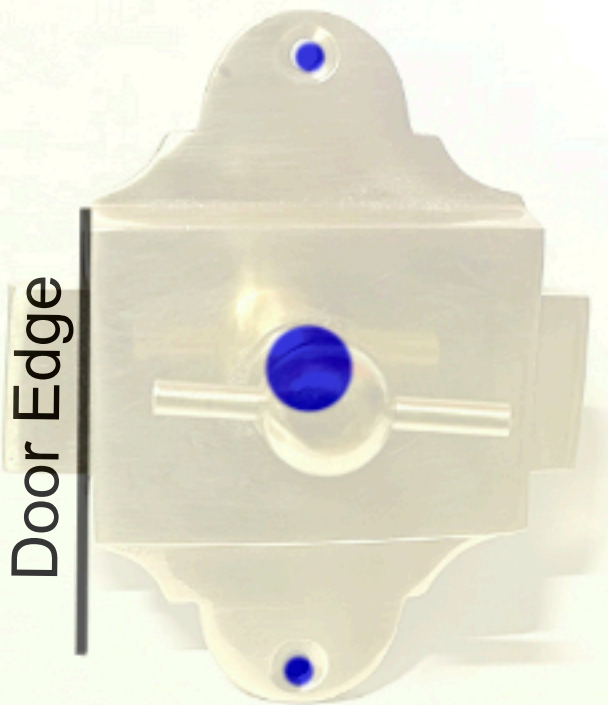

2. Drill two small holes for #6 size screw 1" deep.

3. Drill large hole 7/16" diameter and through door.

4. Center Outside Section Template over large hole through door and mark two smaller holes and drill them for #6 screw 1" deep.

Outside Section



Surface Strike



5. Mount both Sections with provided screws.

6. Mount Surface Strike on door frame as determined by inside section bolt position.

7. Enjoy your Antique Style Bathroom Indicator Lock.

pridebarco.com
(417) 686-0811