




Contemporary Design LED Privacy Indicator Lock

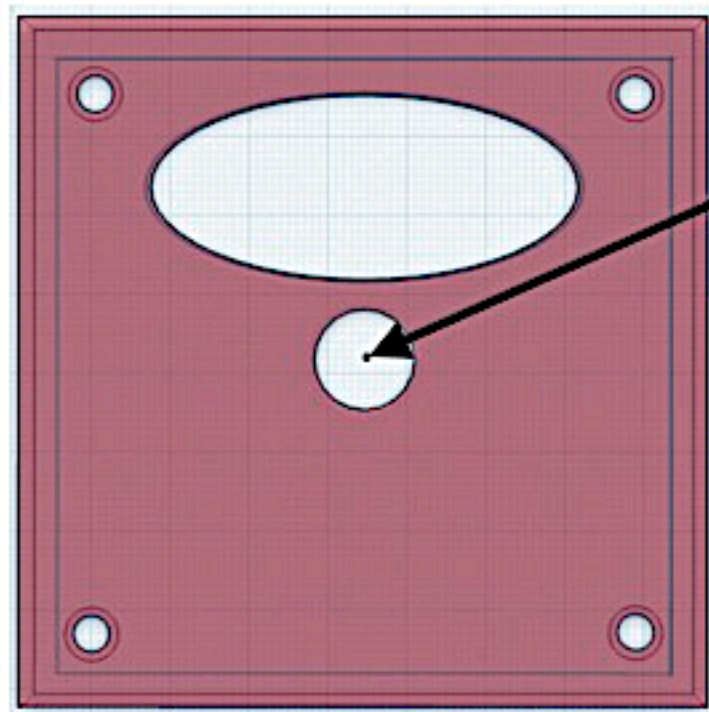

Place this template onto the outside of the door, aligning the large center hole with the 1/2" hole you drilled through from the inside.

Make sure the square indicator section is aligned parallel with door edge and mark the four small screw holes.


Drill the four screw holes with a 1/8" drill bit.

Insert battery into battery holder and place indicator disc center cam onto the turn-bar while in the VACANT position.

Place the Square Indicator Cover so the center hole fits onto the indicator disc center cam.

Mount with the included screws and 4 yellow wood anchors.

The included Bolt Keeper greatly increases the strength of the lock.

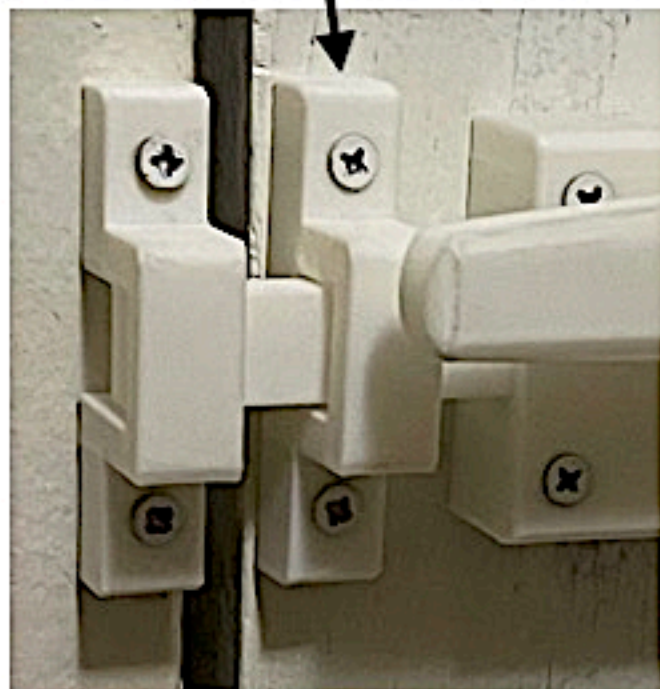

Now you can mount your Bolt Keeper and Strike.

First, without closing the door, place the Bolt Keeper onto the bolt while in the OCCUPIED position and move it nearly to the door edge.

Mark the two holes with a pen or pencil and drill the two holes with a 1/8" bit.

Mount with the included screws.

Move the lock to the VACANT position and close the door. Lock it to the OCCUPIED position and place the door strike over the end of the bolt. Mark your screw holes and drill using the 1/8" bit.

Mount the strike with your included screws and you're done! Enjoy.