


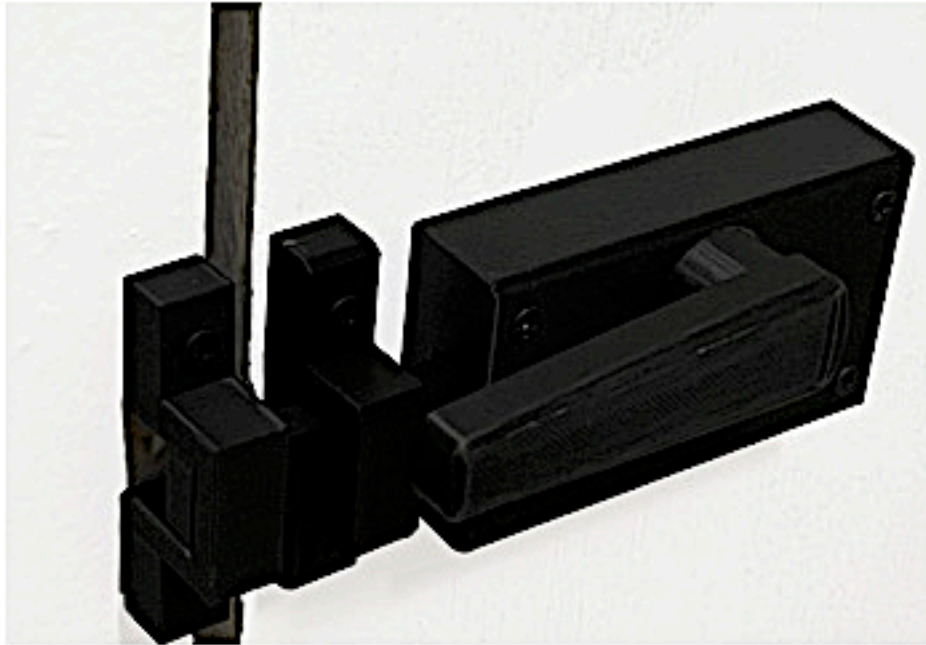

Contemporary Design LED Privacy Indicator Lock



© 2025 Pride Barco Lock Company (417) 686-0811

Align your door edge to the left or right hand door edge lines below.

Mark through the five holes with a pen or small head screw-driver.

Drill four small holes with 1/8" bit.
Drill one large center hole with 1/2" bit.

For ADA Compliance make sure that the large center hole is no higher than 48" from floor.

Mount Inside Section with the four included 2" screws.

Install turn-bar through large center hole and into knob hole.

Turn handle to unlocked position.

LEFT-HAND DOOR EDGE

RIGHT-HAND DOOR EDGE

