


P-100 & P-150 Pocket Door Privacy Indicator Lock



To mount the face-plate so it's flush with the door simply cut a rectangle with a 5/16" depth on the outside of door. You can trace the lock after mounting and then cut or use this template:

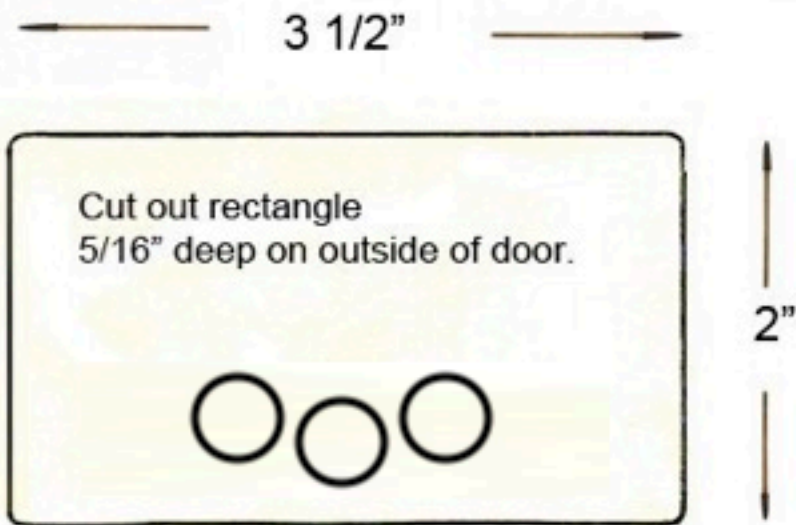

Drill the 7/16" holes
(depth depends on type and thickness
of door)



The P-100 & P-150
face-plate can be flush-
mounted on doors 1 3/8"
or thicker.

(800) 578-1816
sales@pridebarco.com

pridebarco.com