


1. Place template on inside of door so big vertical line is over door edge.
2. Mark the three drill points on Handle Section template.
3. Use a 1/8" drill bit to drill the center hole through door.
4. Use a 3/8" drill bit to open up the center hole from both sides.
5. Drill the remaining holes with a 9/64" drill bit.
6. Fit the turn-bar through large center hole and into the inside lever section.



**Universal Swing-Bolt
Privacy Indicator Lock**

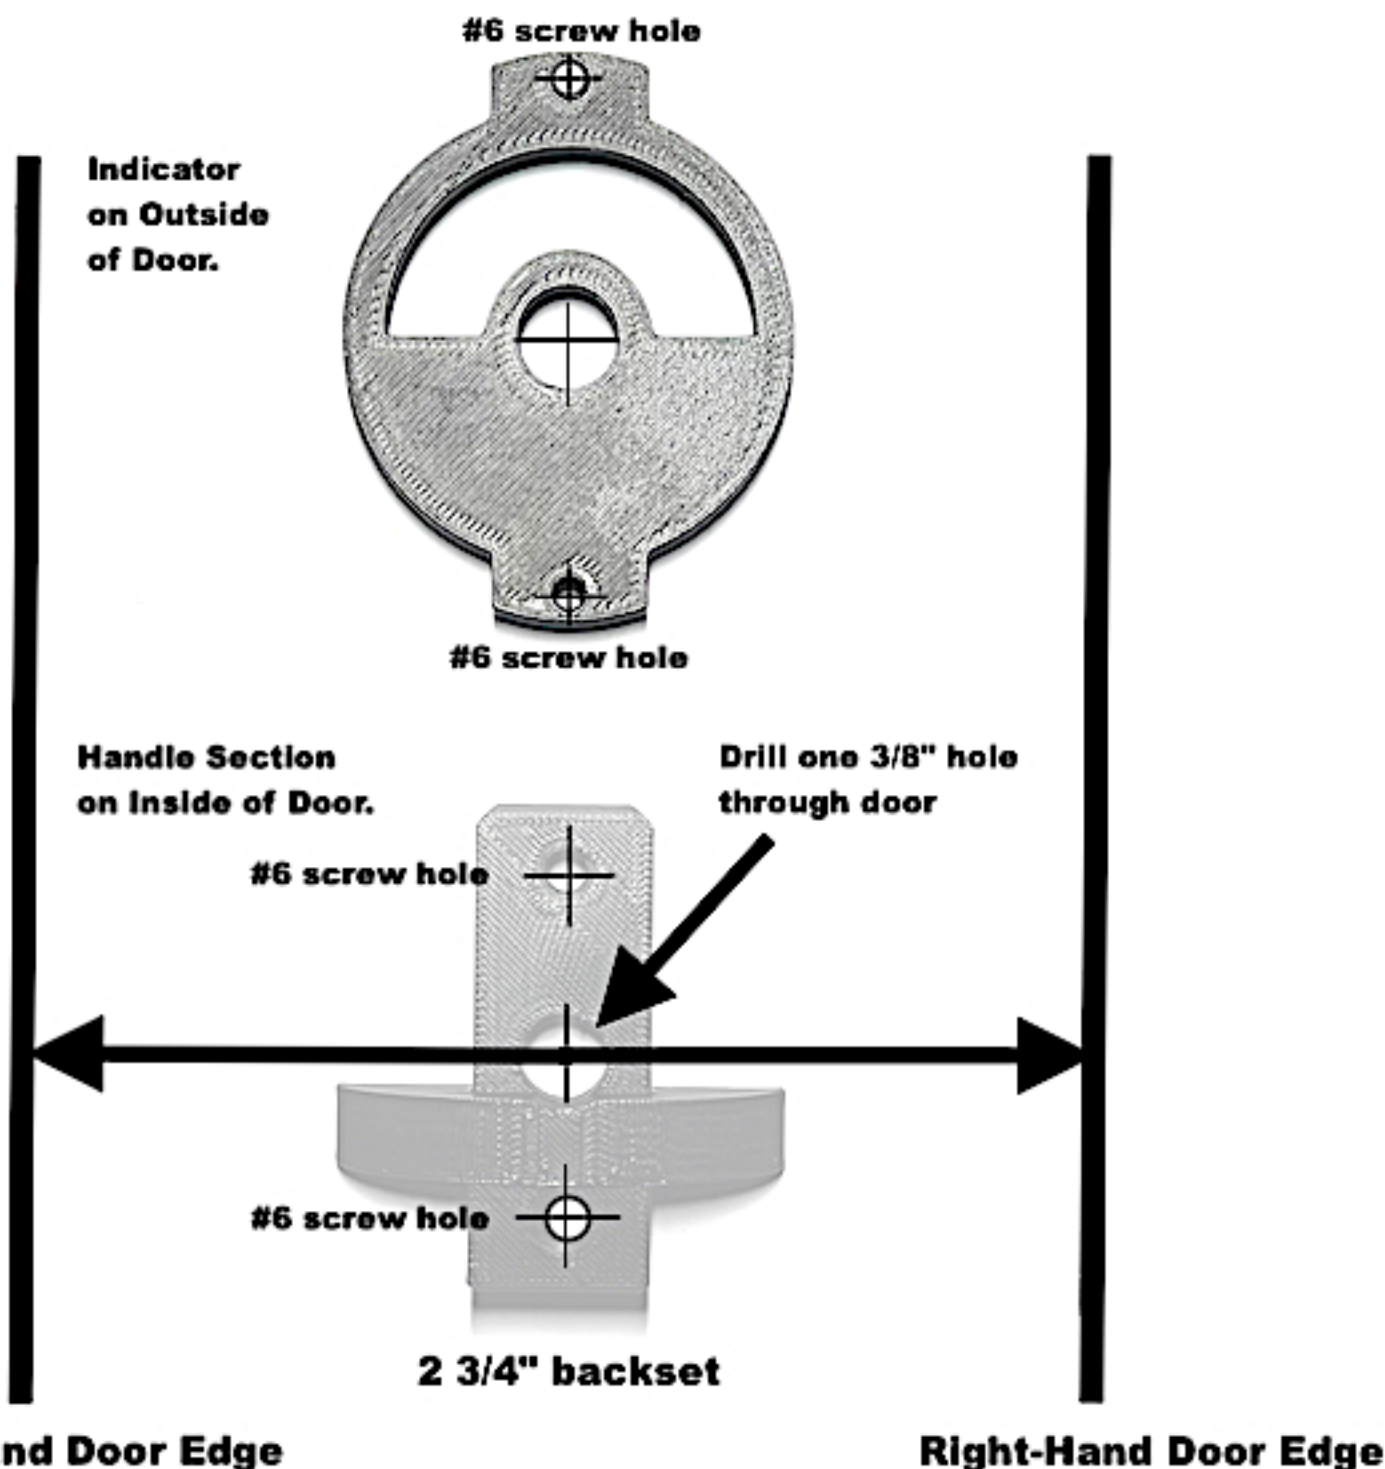

9. Place the Indicator onto the turn-bar on the outside of door and drill the two 9/64" holes.
10. Mount the Indicator and Handle Section with supplied screws.
11. Mount the three bolt keepers as shown in Diagram 2.