




Model D-100 Privacy Indicator Door Lock Mounting Instructions



1. Place Inside Section Template up to door edge and mark center of holes with screw-driver tip. For opposite swinging doors invert template.
2. Drill four small holes for #6 screw 1" deep and drill large hole $\frac{5}{8}$ " diameter through door.
3. Mount inside section with screws and insert turn-bar through $\frac{5}{8}$ " hole and into Inside Section's square cam hole.

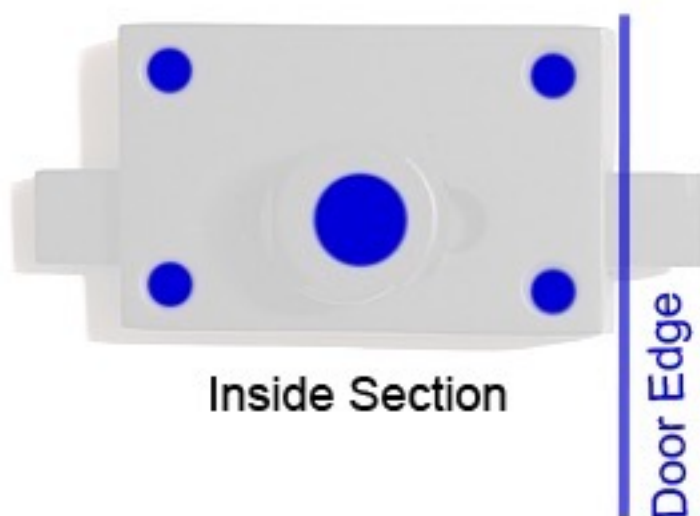


Inside Section

Outside Section



Universal Edge
Strike

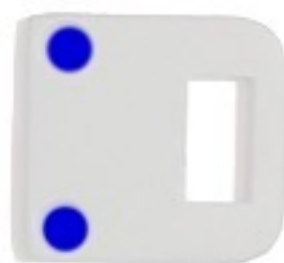

Use when door and
frame are not flush.

Surface-
mounting
Door Strike.



Use when door
and frame are
flush.

4. Place Outside Section with Message Disc on cam, fitting onto turn-bar. Level and mark four small screw holes, drilling 1" deep. Mount with #6 screws.
5. Mount appropriate included door strike. Enjoy.