

Inside Bolt Section

Connecting Rod

Outside Indicator Section

1. Place Template so black Door Edge Line aligns with your door edge.

2. Mark the screw holes with screwdriver tip.

3. Open up the 1 1/2" x 3/8" rectangular slot through door using a 3/8" drill bit and file away any excess wood.


Door Edge (for opposite door flip template upside-down)

4. Install the Inside Bolt Section with provided screws and attach the screw-in Connecting Rod.


5. Position the Outside Indicator Section on outside of door so the Connecting Rod fits into hole on back of sliding indicator.



6. Mount Outside Indicator Section with provided screws.

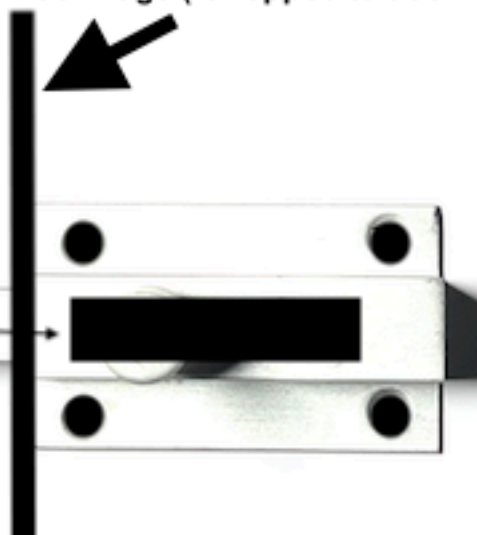

Inside Bolt Section

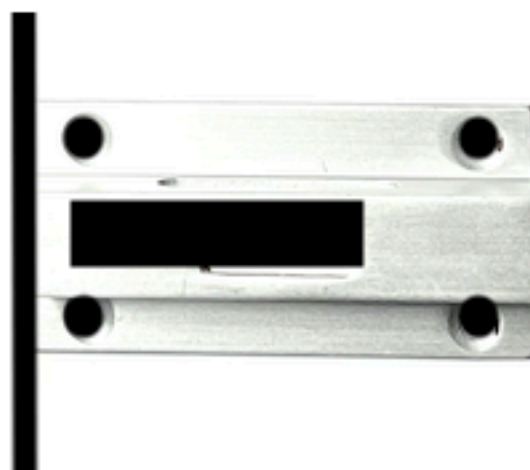

Outside Indicator Section