




Nautical Style Bathroom Indicator Lock



Door Edge

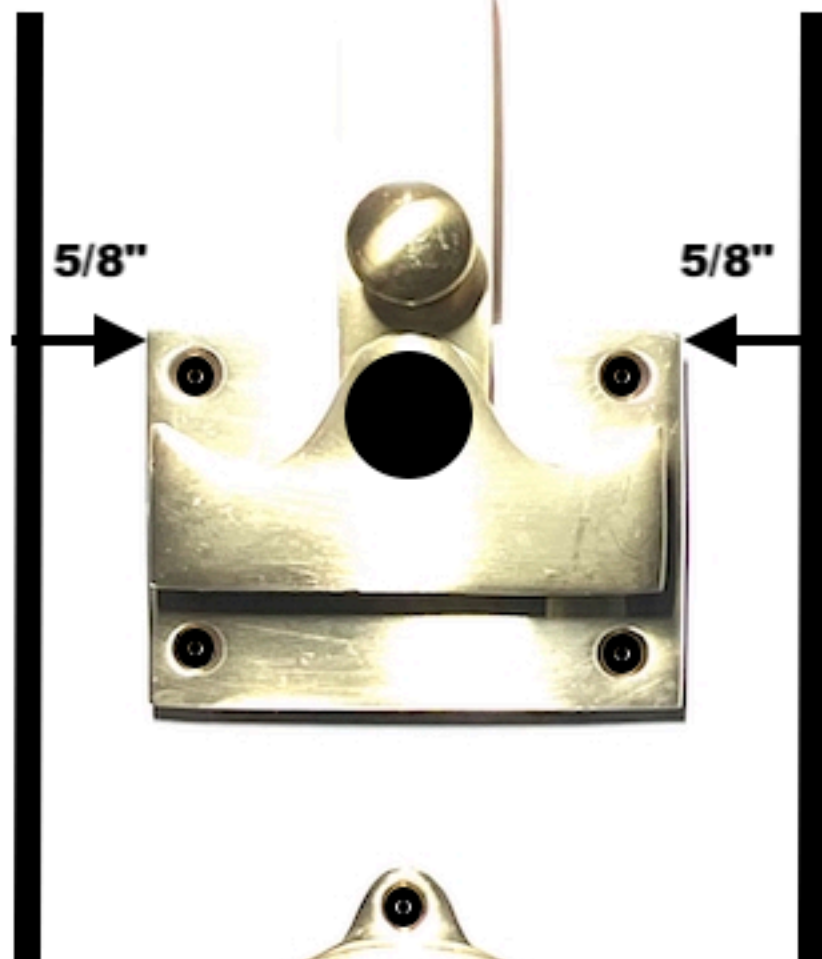

Door Edge

**1. Mount Inside
section 5/8" from
door edge.**

**2. Drill four 1/8" holes
1 inch deep and one
1/2" hole through door.**

**3. Mount with
supplied screws.**

**4. Mount outside
section over 1/2"
hole on outside of
door.**

**5. Drill two 1/8" holes
one inch deep and
mount with supplied
screws.**

**6. Mount supplied
door strike near edge
of door frame.**

