




D-100 LED 12V DC


Indicator Door Lock Mounting Instructions



1. Place Inside Section Template up to door edge and mark center of holes with screw-driver tip. Note: For ADA Compliance mount no higher than 48" from floor. For frames with molding align door edge up to dotted lines and check to make sure Universal Edge Strike keeps the bolt when locked.
2. On Inside Section, drill four small holes for #6 screw 1" deep and drill 1/8" hole in center of larger hole through door.
3. When installing outside indicator and Glow Bracket make sure to pull black and red wire through the 5/8" hole and connect to your 9-12 Volt DC Power Supply wires inside door.
4. On Inside Section, open up the 1/8" center hole with 5/8" drill through door and mount Inside Section. Place Outside Section with L.E.D. Message Disc and turn-bar into hole, making sure turn-bar connects into Inside Section cam. Level and mark four small screw holes, drilling 1" deep.

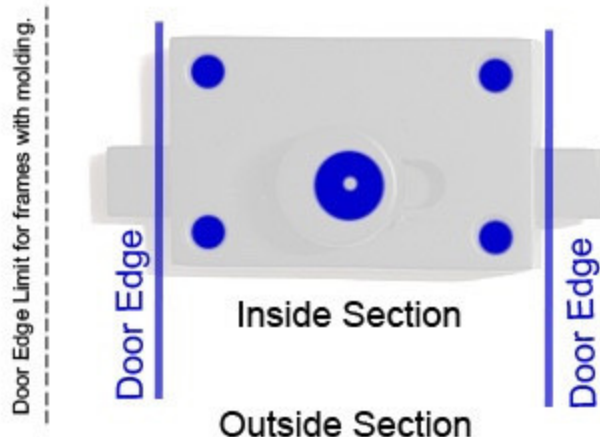

Outside Section

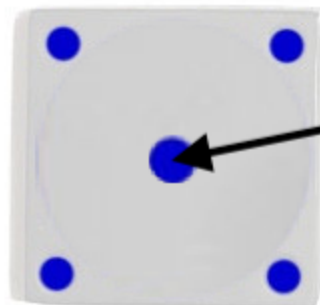

Drill a 5/8" hole through door.

Universal Edge Strike



Use when door and frame are not flush.

Surface-mounting Door Strike.



Use when door and frame are flush.

5. Mount Outside Section, making sure Occupied is visible and lighted when locked.

6. Mount appropriate included door strike. Enjoy.