


INSTALLATION OF L-100 INDICATOR

1. Place the inside section on the inside of door and turn the lever until the bolt is completely extended over the door frame.

2. Use a pencil to mark the screw holes for the strike and the inside section:

INSIDE SECTION

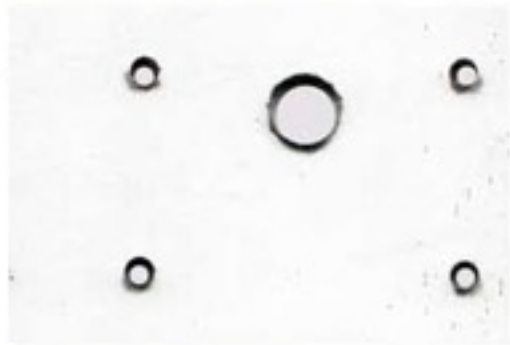

For the small holes, use a #37 drill (.104" diam.)

Use a 7/16" drill for the larger center hole

3. Place this template over the screw hole marks and trace with a pencil the larger middle hole.

4. Drill the larger middle hole through door with a 7/16" drill.

5. Gently bevel both ends of the 7/16" hole.

6. Mount the inside section to the door with included screws.

7. Mount the door strike with included screws.

8. Place turnbar into 7/16" hole, connecting it into the inside section's handle while bolt is fully extended.

9. Put outside section onto turnbar so that it reads **ENGAGED when the bolt is locking the door.**

10. Mark screw holes on outside section, making sure it's level and reads **ENGAGED.**

11. Mount the outside section with included screws.
If you feel resistance when mounting indicator onto door, the turnbar may be too long. Remove and trim the turnbar length until it mounts easily.

IMPORTANT:

The included turnbar is for 1 3/4" thick doors.

For thinner doors reduce the turnbar length accordingly:

EXAMPLE: If your door is 1 1/2" thick, simply cut 1/4" off the turnbar.

EXAMPLE: If your door is 1 1/4" thick, simply cut 1/2" off the turnbar.

For assistance call us:
(800) 578-1816

